



A leading worldwide distributor since 1982

Nice Apollo Ridge-433 Keypad to 636/936/1050 Board Wiring Instructions

In order to hook up your new Nice Apollo Ridge-433 Keypad to either a 636, 936, or 1050 Board operated opener, you'll need to follow the chart below. This chart will show which transceiver terminal corresponds to the proper input terminal on your gate operator.

Transceiver Terminal	636 Board Terminal	936 Board Terminal	1050 Board Terminal
POS (+)	12V	+12V-a	V+ (#11)
NEG (-)	GND	GRD	GND (#10)
NO	FREE EXIT (#10)	EXIT	EXIT (#30)
COM	GND (#11)	GRD	GND (#31)

DF Supply, Inc. • 8500 Hadden Road • Twinsburg, OH 44087

Toll-free: (800) 878-7829 • Local: (330) 650-9226 • Fax: (330) 650-9004

Email: sales@dfsupplyinc.com • Web: www.dfsupplyinc.com